


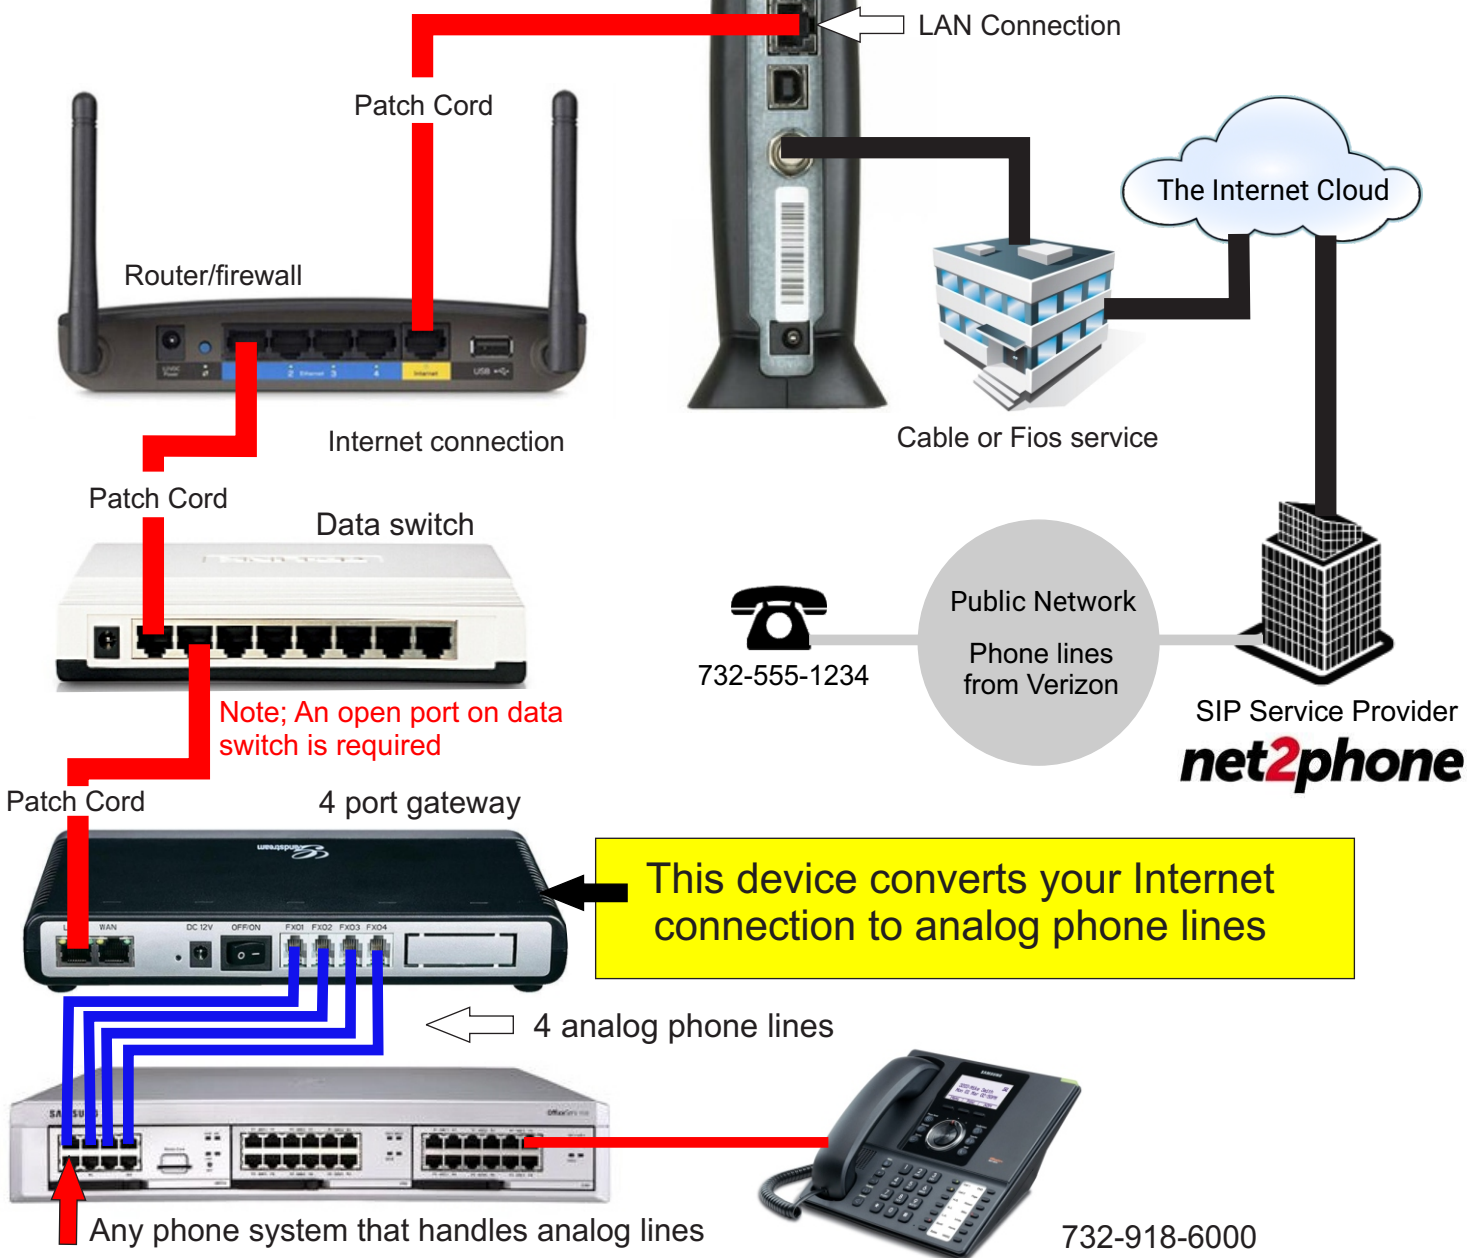

Cable or FIOS Modem

### SIP Service Diagram Using a 4 port Gateway



## Router Setup:

Login to the router using the Username and Password. For help refer to router documentation.

Navigate to Port Forwarding. For help refer to router documentation.

Open ports 5060 to 5060 on the IP address for the system being installed (e.g., 192.168.1.249) for both UDP and TCP (Name = SIP).

Open ports 10000 to 20000 on the IP address for the system being installed for both UDP and TCP (Name = RTP).

Open ports 4569 to 4569 on the IP address for the system being installed for both UDP and TCP (Name = IAX2).

**Make sure SIP ALG is turned off**